
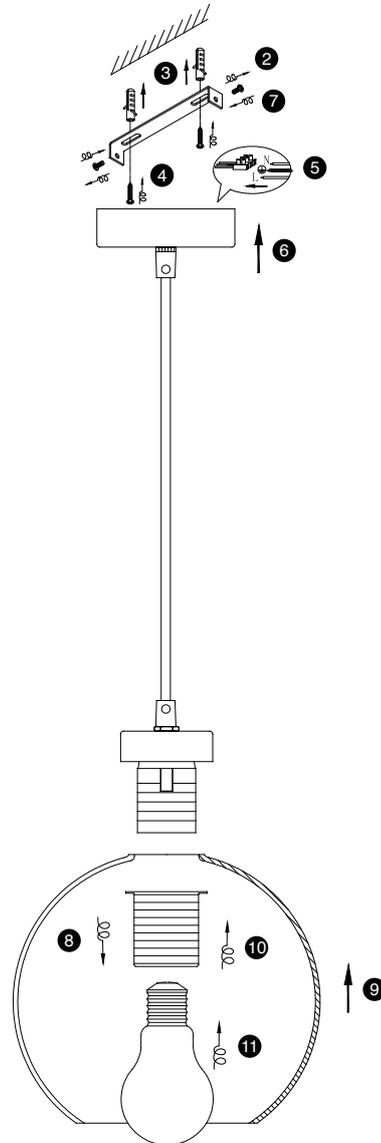
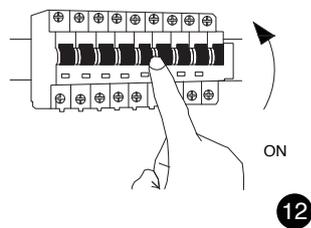


# NOVA LUCE

9241130

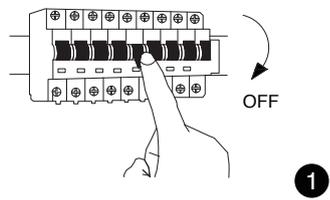

1. Turn on the general switch
2. Untighten the top cap
3. Drill holes and apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place

7. Tighten the top screw
8. By rotating, untighten the socket
9. Apply carefully the acrylic
10. Put the socket in place
11. Apply the bulb
12. Turn on general switch