









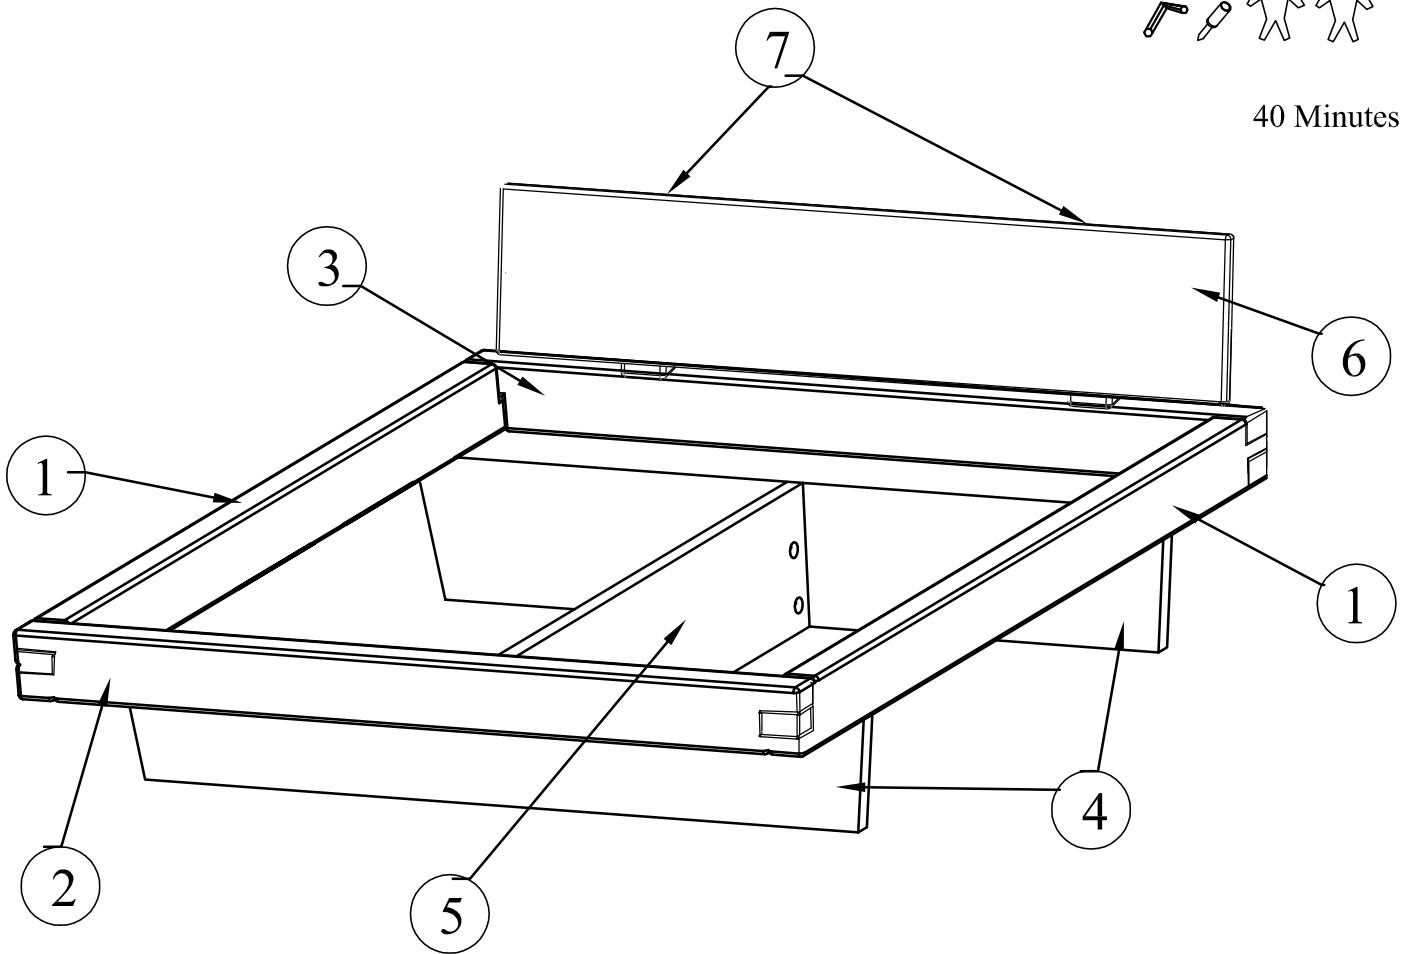

BED MATUS - ASSEMBLY INSTRUCTION







40 Minutes




Ø10x50	M6x60		M6x50	Ø3,5x30	40x40x30	35x35x90	SW4
							
Ax4	Bx8	Cx4	Dx8	Ex84	Fx4	Gx4	Hx1

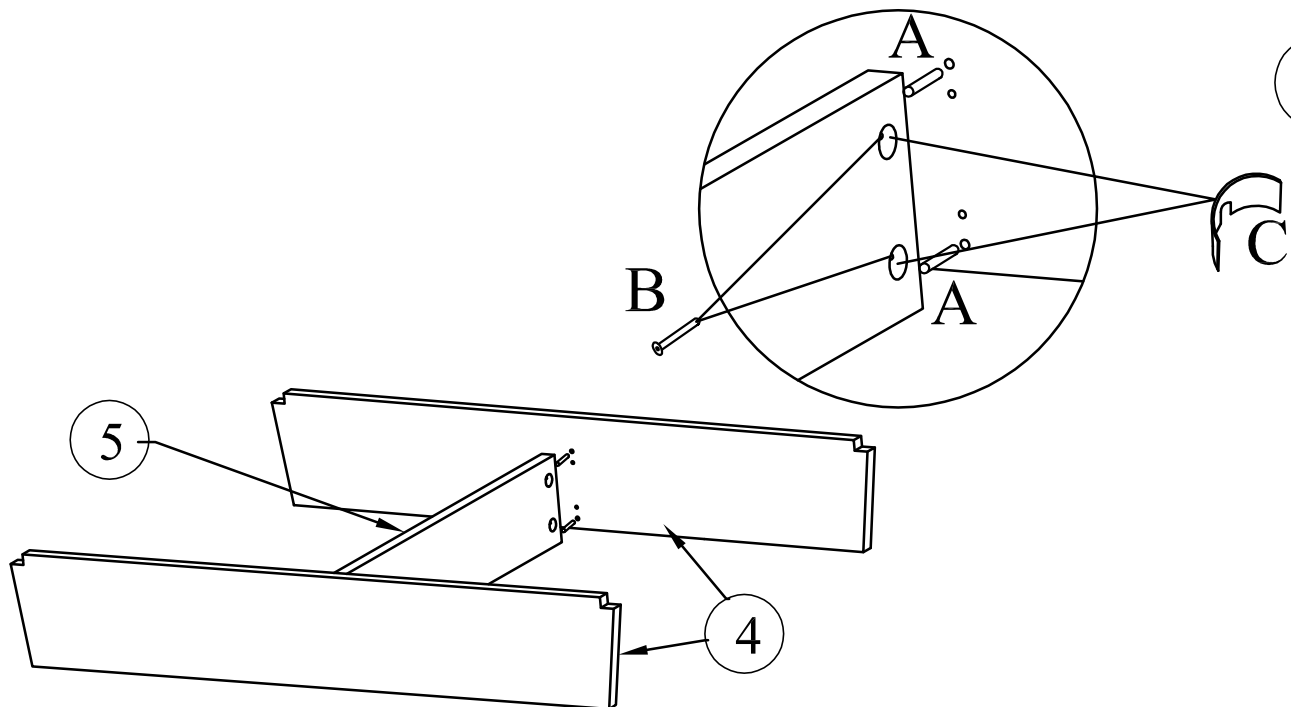

1




Ø10x50	M6x60	
		
Ax4	Bx4	Cx4

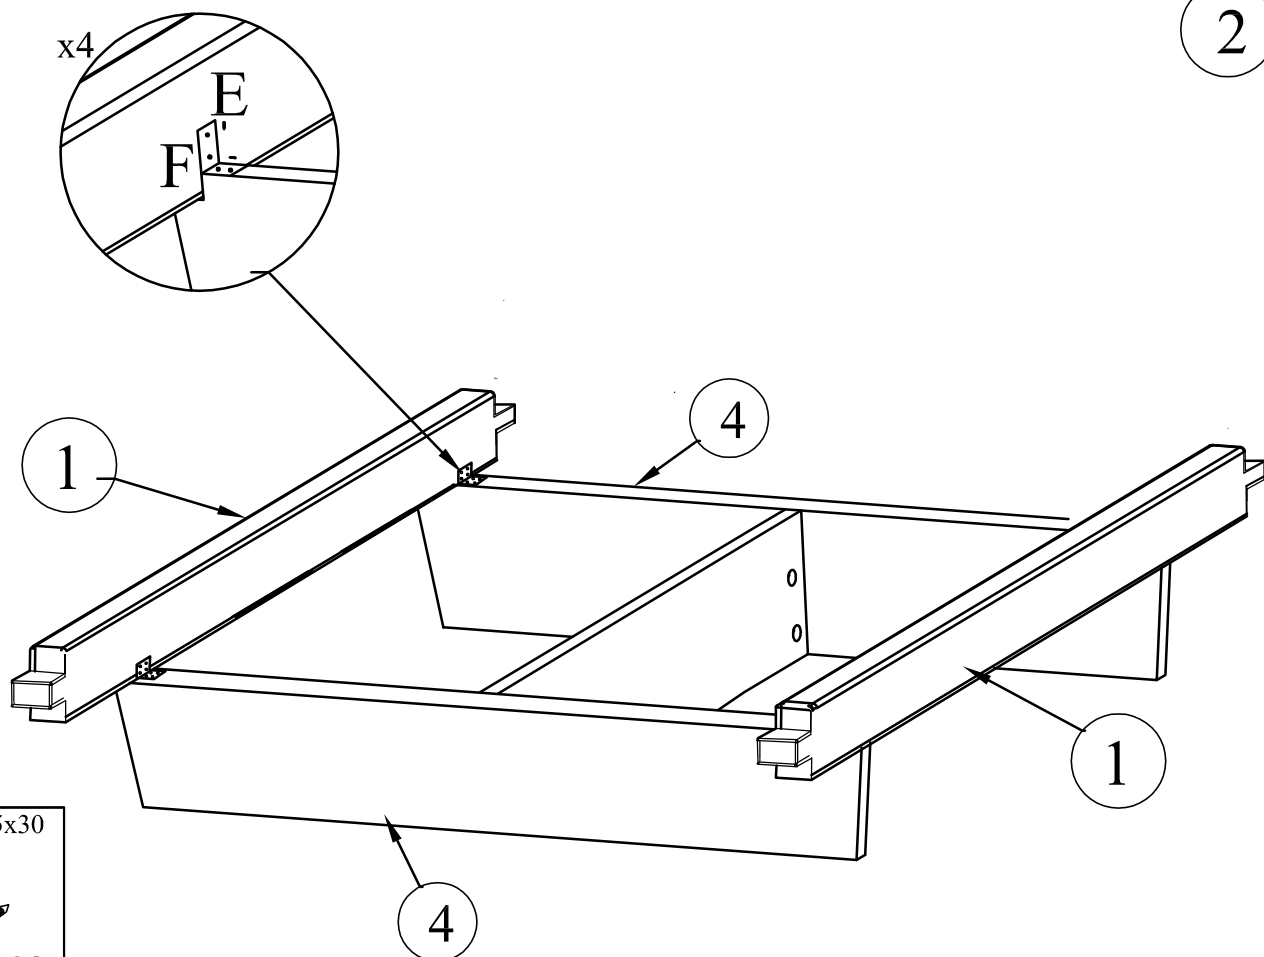
2



40x40x30	Ø3,5x30
	
Fx4	Ex32


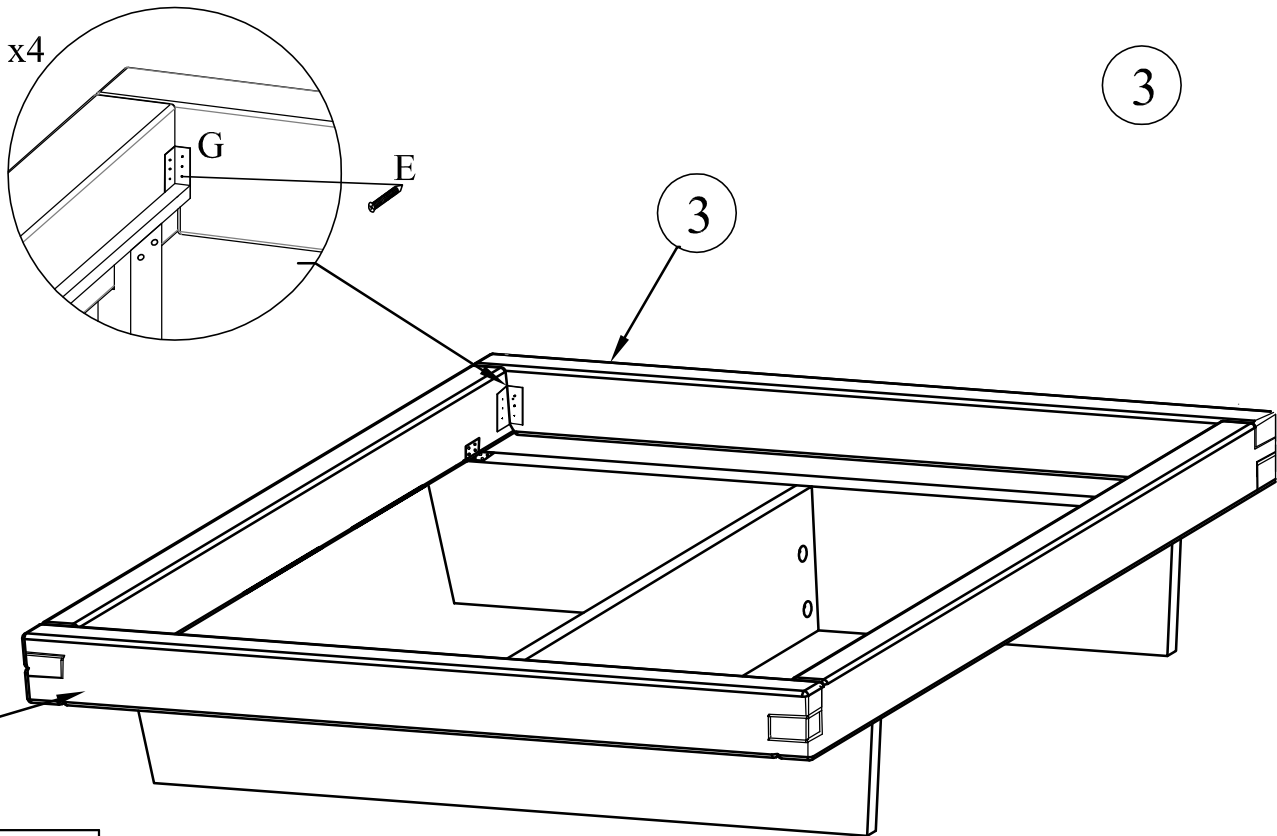


35x35x90	Ø3,5x30
Gx4	Ex24

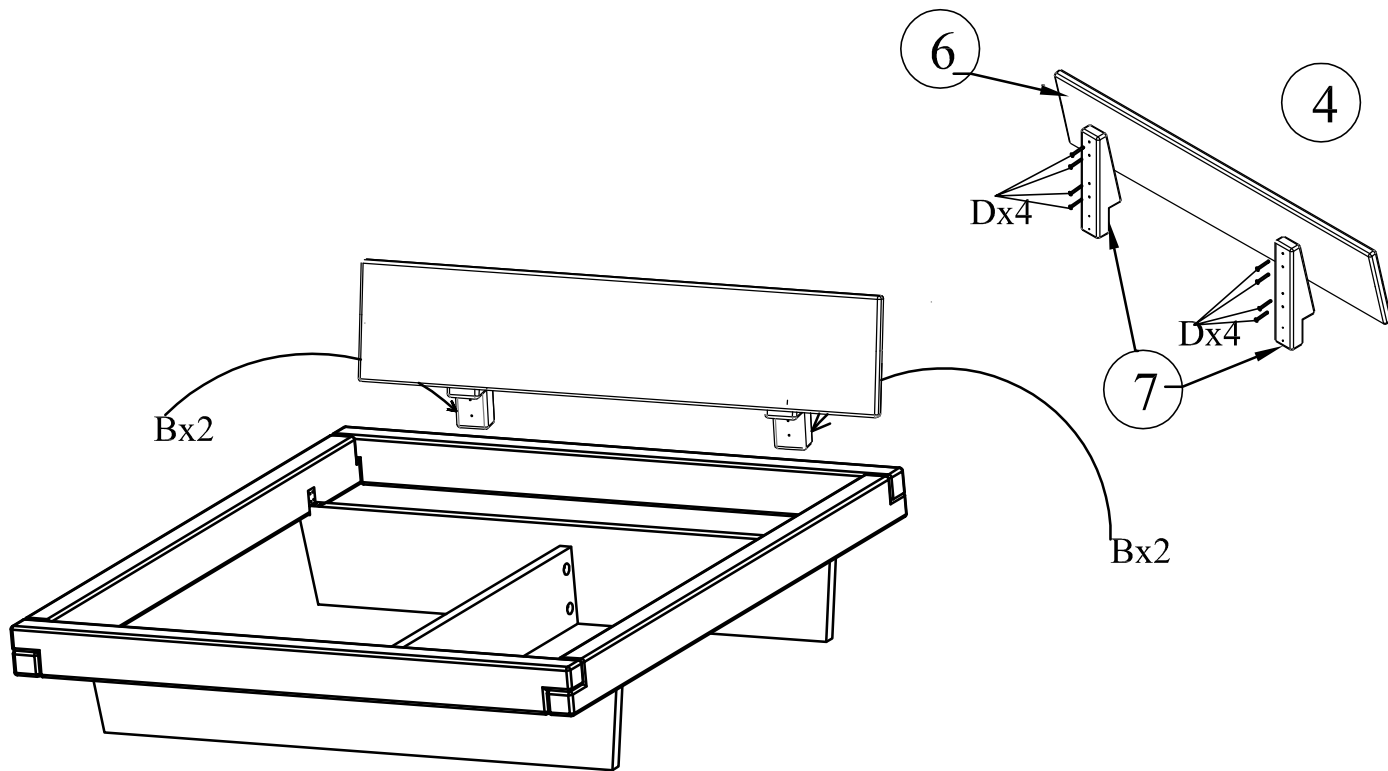

M6x50	M6x60
Dx8	Bx4

5

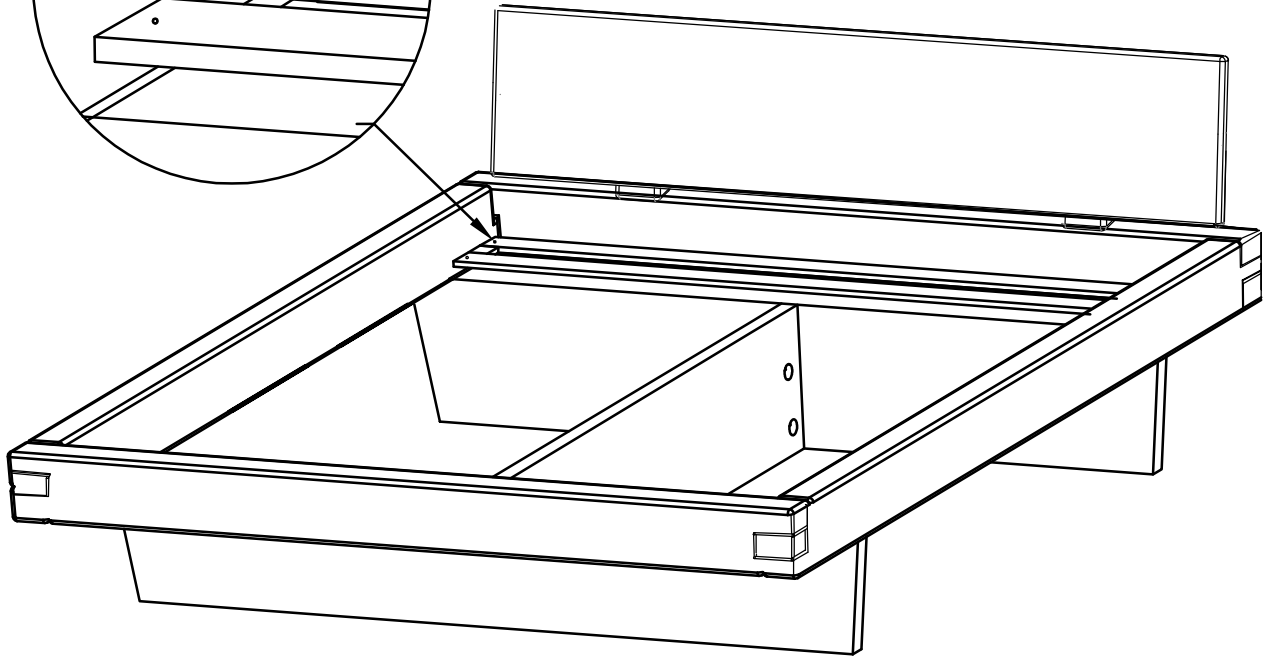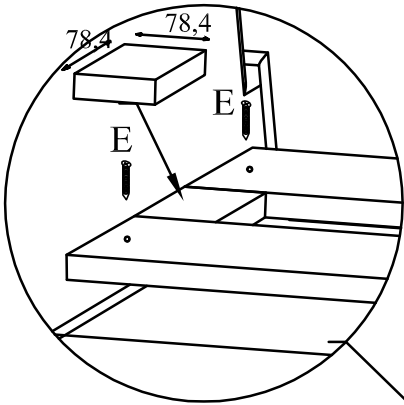

Ø3,5x30



Ex28

6

