












BED MIA - ASSEMBLY INSTRUCTION

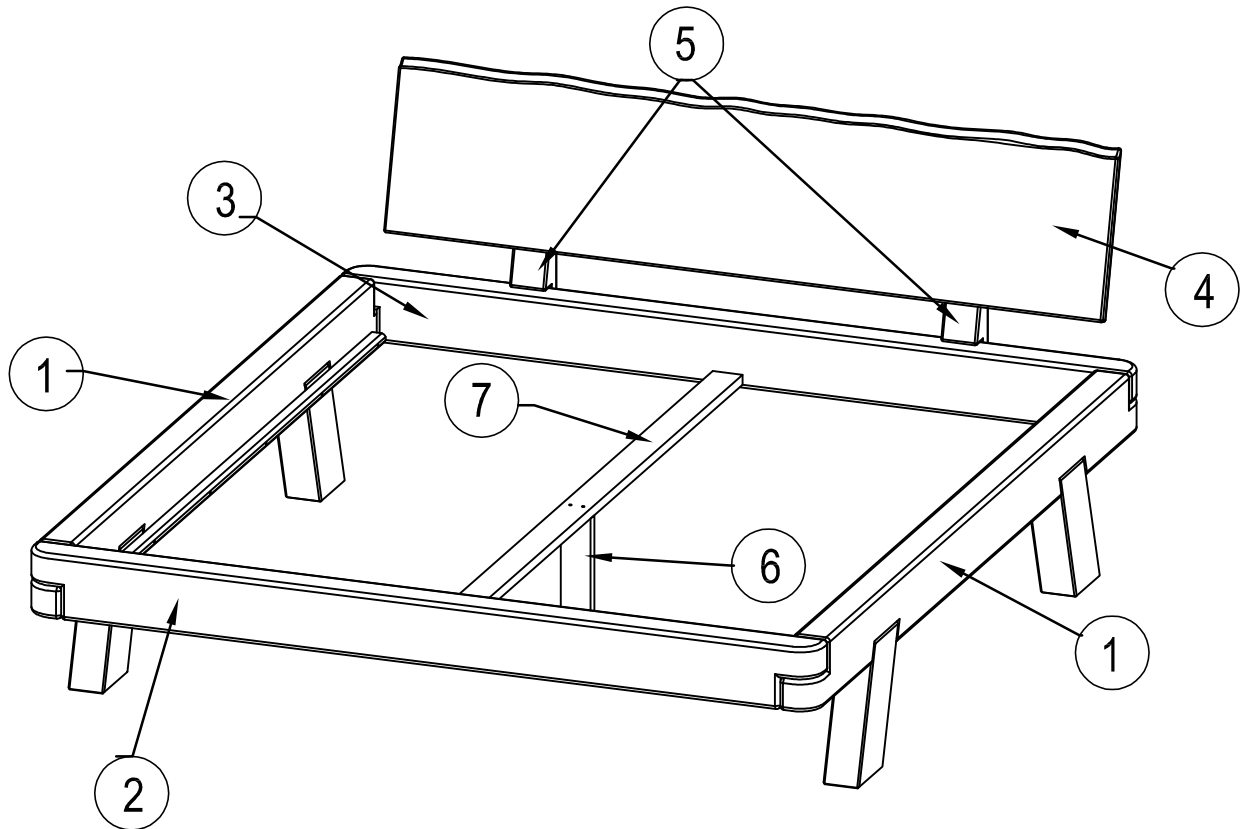


40 Minutes



Ø12x100	M6x50	M6x60	Ø6x70	Ø3,5x30			35x35x90	SW4
								
Ax4	Bx8	Cx4	Dx2	Ex66	Fx2	Gx2	Hx4	Ix1

x4

1

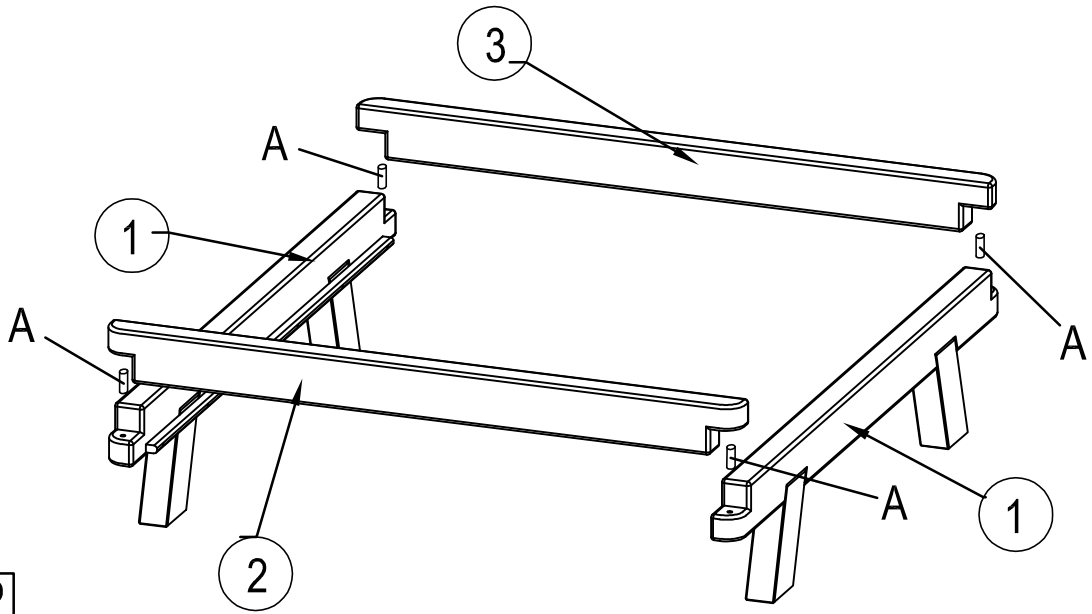


Ø12x100



Ax4

2

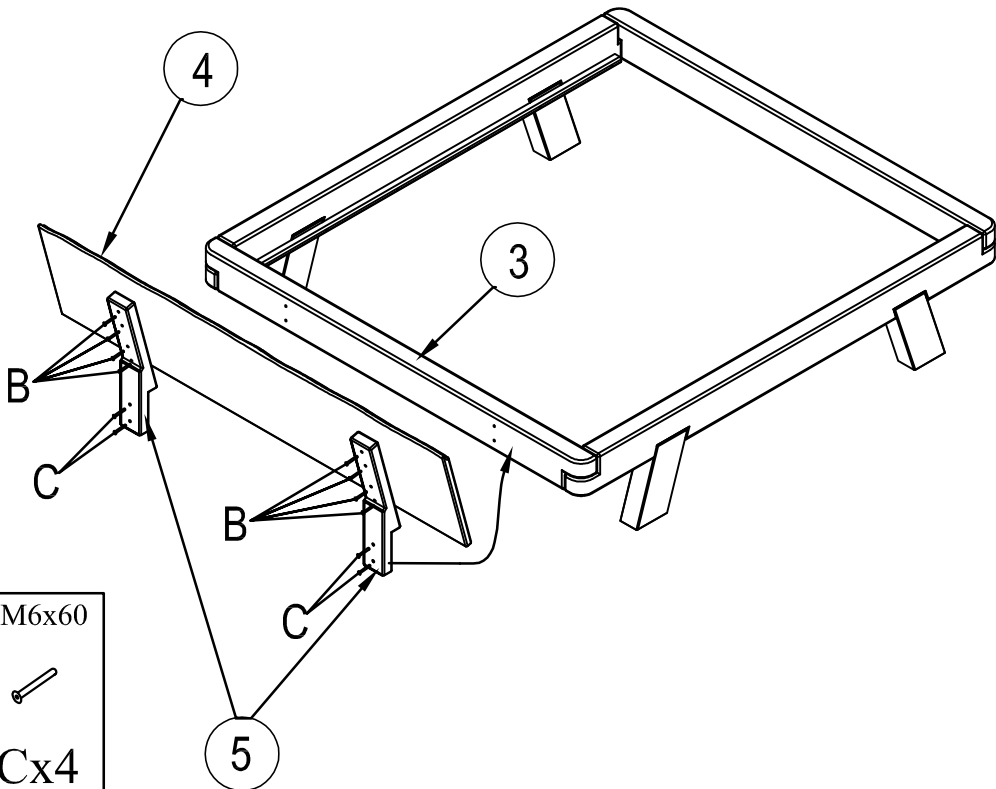

M6x50






Bx8

M6x60



Cx4



3

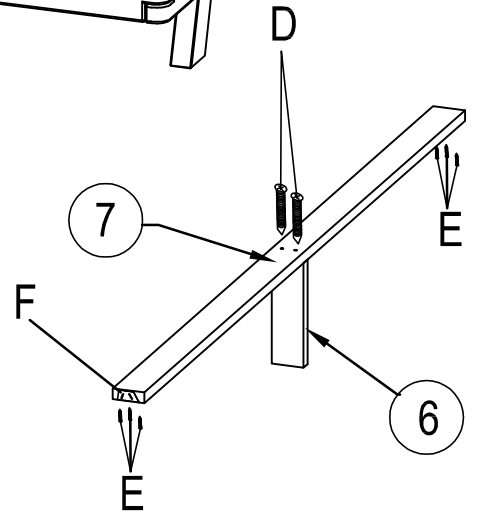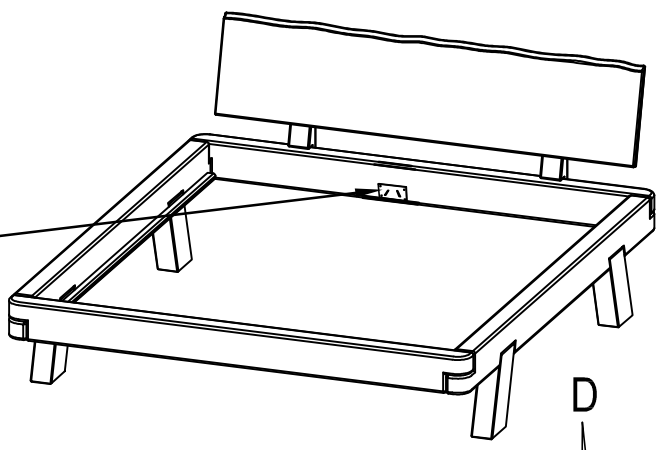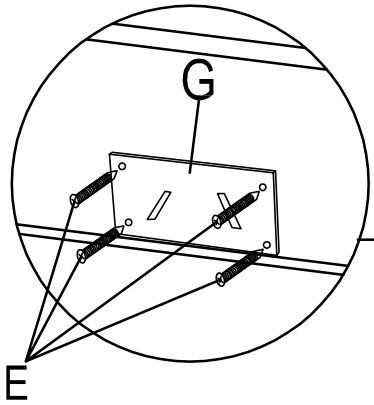

Ø6x70	Ø3,5x30		
Dx2	Ex14	Fx2	Gx2



x4


4

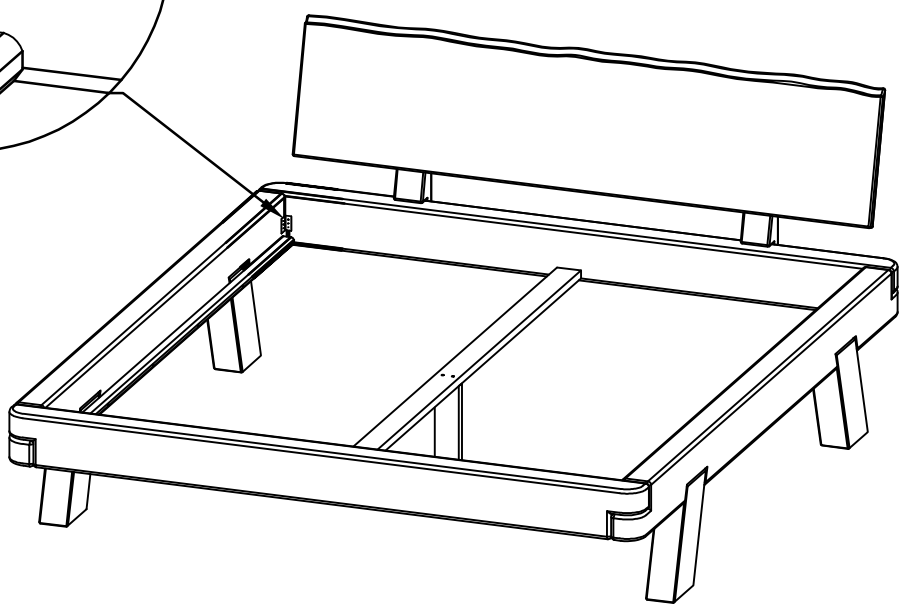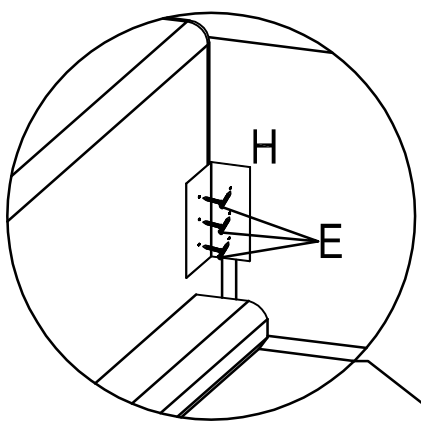

Ø3,5x30	35x35x90
Ex24	Hx4

5

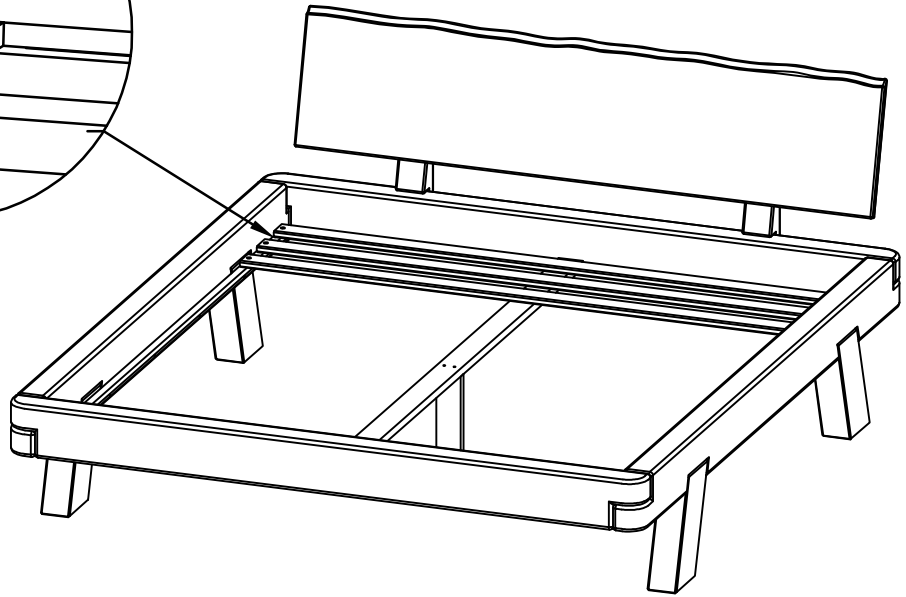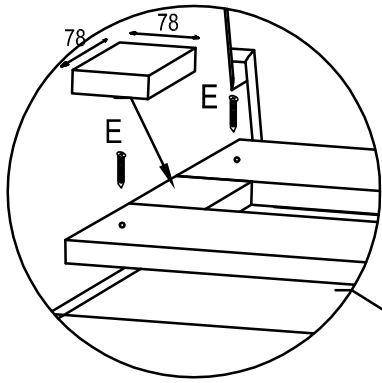

Ø3,5x30

Ex28

6

